
Rails for Switches and Sensors / Bar Nuts


L Configurable, Calibrated (Shape A, B and C) / Rails for Photomicrosensors / Standard / With Nut Retainer

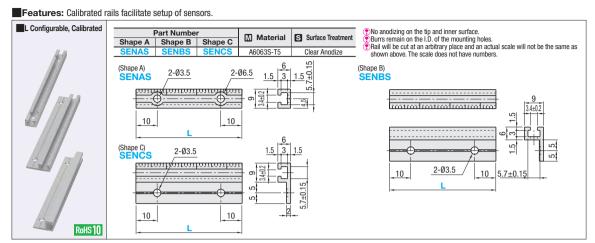


L

L Configurable, Calibrated (No. indicates the applicable nut size. For Shape A (SENAS), the inside of groove is slightly milled.)


Part		L 1mm	Unit Price				Ordering	Part Number
Numbe	er	Increment	SEI	NAS	SENBS -	SENCS	Example	SENAS3
Type	No.	increment	L50~100	L101~200	L50~100	L101~200		SENCS3
(Shape A) SENAS (Shape B) SENBS (Shape C) SENCS	3	50~200						

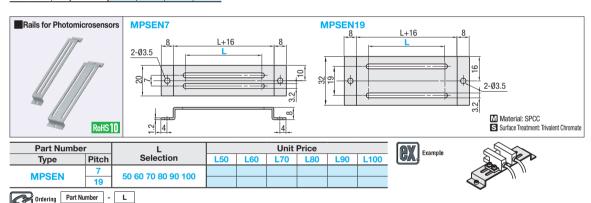

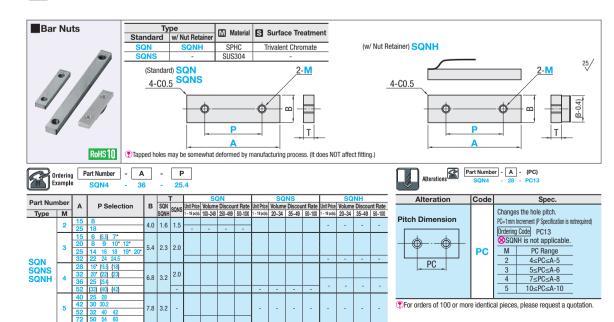


Rails for Switches and Sensors / Rail Mount Fittings / Nuts for Rail

Steel, L Selectable / L and Hole Position Configurable

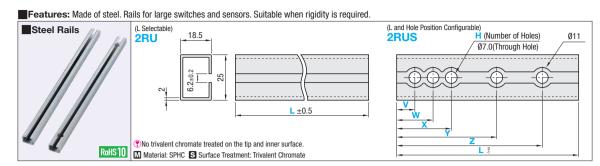

Part			Volume Discount Rate	Part Number		1mm Increment		Hole	Body Price						
Number	Selection	1 ~ 9 pc(s).	10~50	Fartivui	libei	11111111111		Machining	L50	L101	L201	L401	L601	L801	L1001
	100			Type	Number of Holes	1	VWXYZ	Charge	•	3	1	ı	ı	1	1
	200			Type			VWXIZ	Ollarge	100	200	400	600	800	1000	1200
	300				OH (No Hole)										
2RU	400				2H										
ZhU	500			2RUS	3H	50~1200	10~1190								
	600			21100		00-1200	10-1100								
	1000				4H										
	1500				5H										
To rorders larger than indicated quantity, please request a quotation.															



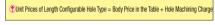


- V




2RUS2H - 300 - V100 - W200 (Unit Price in the Table)+ (Hole Machining Charge) = Unit Price for Notched Hole Type

(Ex.) Part Number - L

②2RU can be mounted in two ways. Screw on the rail by inserting rail mount fittings (2P) into both ends, or weld the rail directly onto a machine. For attachment of 2RUS, use M6 hex socket head cap screws. Applicable nut is RFM5. The RFM5 and the screws will not interfere as shown in the example

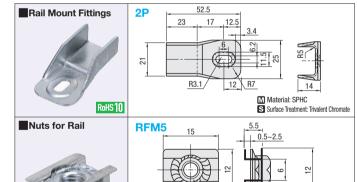

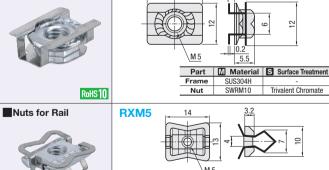

Part Material Surface Treatm

Trivalent Chromate

Frame SUS304CSP

Nut SS400

please check with WOS

Dort Number	Unit Price	Volume Discount Rate 100~149 150~199 200~30						
Part Nulliber	1 ~ 99 pc(s).	100~149	150~199	200~300				
2P								
RFM5								
RXM5								


RoHS10



- •Insert the nuts from either end of the rail. (Tap in lightly with a hammer.)
- •An RFM nut can be inserted with the 2P fitting attached.

■How to Attach RFM Nuts

•RFM and RXM nuts utilize stainless steel spring tension to prevent from falling even when installed on vertical rails.

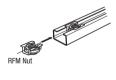



■How to Attach RXM Nuts

•The RXM nuts can easily be attached in the middle of a rail to facilitate convenient component additions even after the machine building has been completed



Place the RXM nut's spring tip on the rail groove and press i with fingers.



Slightly lift the other side of spring, and push it into the rail



Push the center and either side of the RXM nut diagonally with a

